


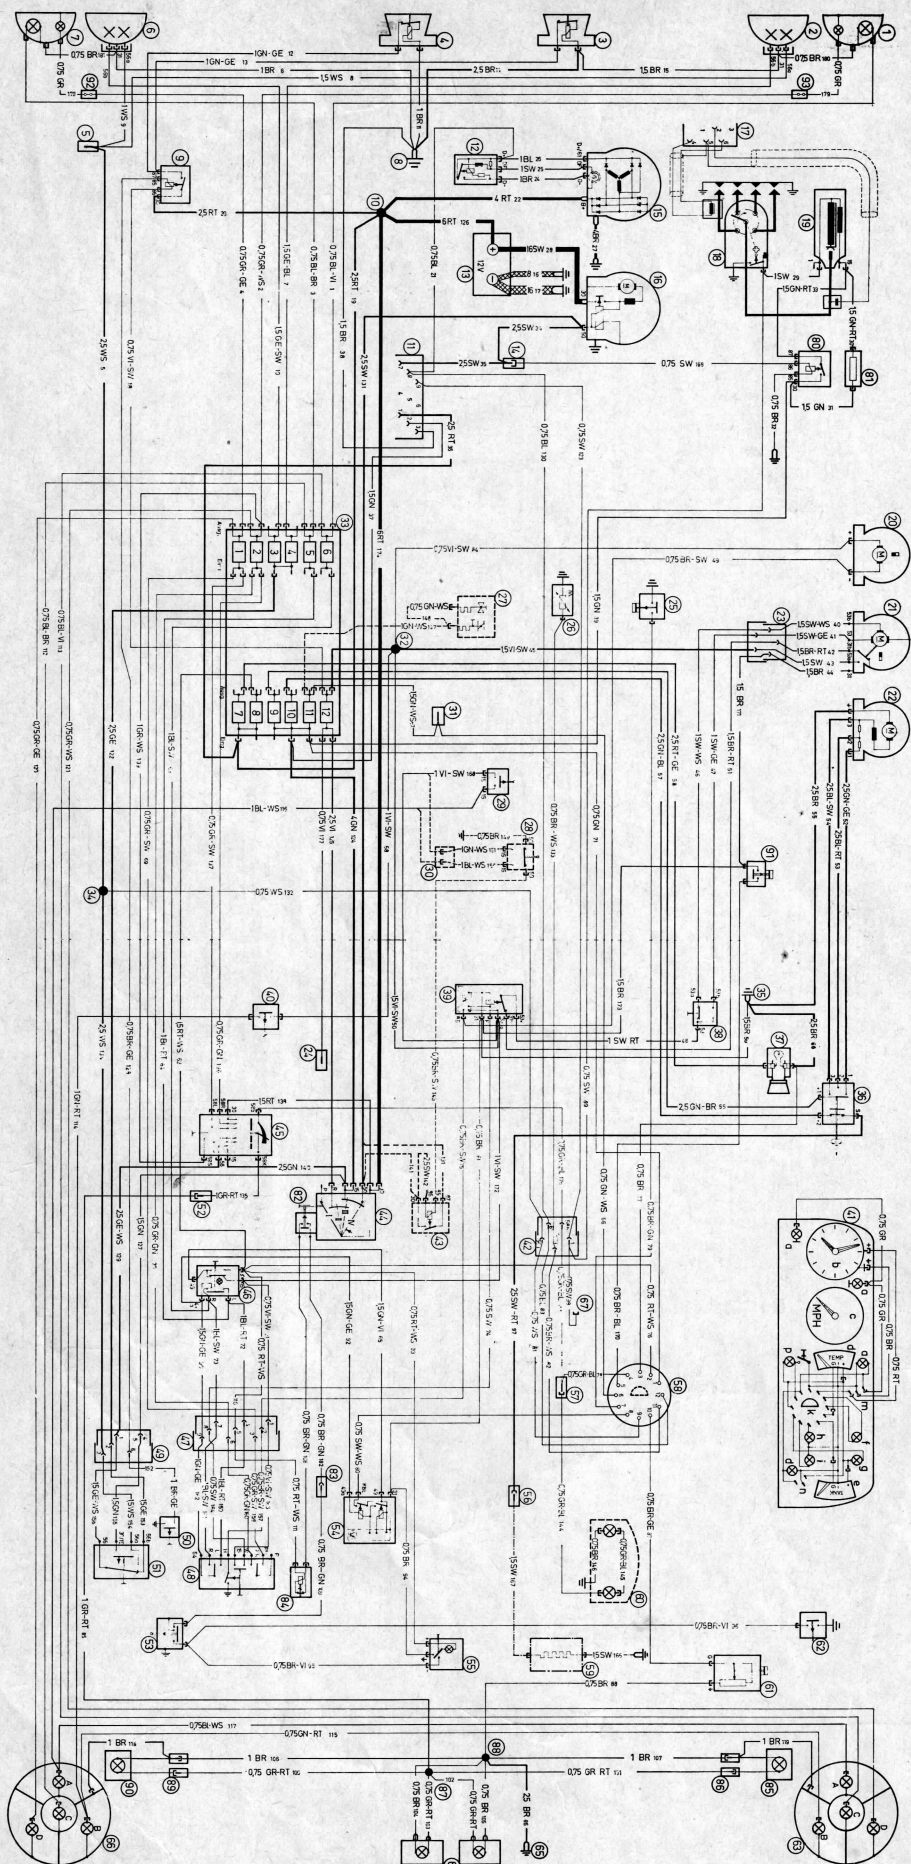

1 Front R.H. flasher with parking light	38 Wiper speed switch	61 Fuel gauge transmitter	75
2 Right-hand headlight	39 Wiper washer transmitter	62 Door contact	76
3 Right-hand fanfare	40 Brake light switch	63 Right-hand rear light	77
4 Left-hand fanfare	41 Instrument set	A = Reversing light	78
5 Connection for fog lamp relay	a = Illuminated scale	B = Brake light	79
6 Left-hand headlight	b = Clock	C = Flasher	80 HT ignition system relay
7 Front L.H. flasher with parking light	c = Tachometer	D = Tail light	81 Series resistance
8 Earth (ground)	d = Coolant temperature gauge	64 Number plate light	82 Buzzer contact
9 Fanfare relay	e = Fuel gauge	65 Earth (ground)	83 Connection for buzzer contact
10 Solder point	f = Charging lamp (red)	66 Left-hand rear light	84 Buzzer
11 Test equipment connection	g = Oil pressure telltale (orange)	A = Reversing light	85 R.H. side marker light
12 Regulator	h = High beam telltale (blue)	B = Brake light	86 R.H. side light connector
13 Battery	i = Flasher control (green)	C = Flasher	87 Solder point 58 K
14 Connection for electrical system	k = 12 pin plug	D = Tail light	88 Solder point 31
15 Generator	m = 3 pin plug (clock)	67 Connection for rev. counter	89 L.H. side marker light connection
16 Starter	n = 3 pin plug (rev. counter)	68	90 L.H. side marker light
17 Connection for test equipment with lead and pickup	p = Brake fluid level (red)	69	91 Brake fluid level switch
18 Distributor	42 5 pin plug	70	92 Cable connector
19 Ignition coil	43 Starter relay	71	93 Cable connector
20 Windshield washer pump	(only with automatic transmission)	72	
21 Windshield wiper motor	44 Ignition switch	73	
22 Blower motor	l = Off; II = 0; III = On; IV = Start	74	
23 5 pin plug terminal to wiper motor	45 Light switch		
24 Radio connection	46 Hazard flasher switch		
25 Oil pressure switch	47 9 pin plug terminal to turn indicator switch		
26 Remote reading therm. transmitter	48 Turn indicator switch		
27 Automatic starter carb.	49 6 pin plug to dip switch		
(only with automatic transmission)	50 Signal button		
28 Reversing light switch with starter lock	51 Dip switch		
(only with automatic transmission)	52 Connection for number plate light and fog lamp		
29 Reversing light switch	53 Door double contact		
30 2 pin plug terminal (only with automatic transmission)	54 Hazard flasher		
31 Connection for fuel pump	55 Interior light		
32 Solder point	56 Connection for heater rear window		
33 Fuse box	57 Selector lever light connection		
34 Solder point	58 12 pin plug to instrument set		
35 Earth (ground)	59 Heater rear window		
36 Blower switch	60 Selector gate light		
37 Cigar lighter			

