


65 Radio and Special Equipment


65 11 000	Radio with loudspeaker and suppressor kit — installing	Page 65—11/1
21 000	Front antenna — installing	65—21/1

65 11 000 Radio with loudspeaker and suppressor kit – installing


Remove (install) storage compartment – 51 16 200.
Remove (install) front antenna – 65 21 000.
Fit the loudspeaker – radio connecting cable (1) to the loudspeaker.

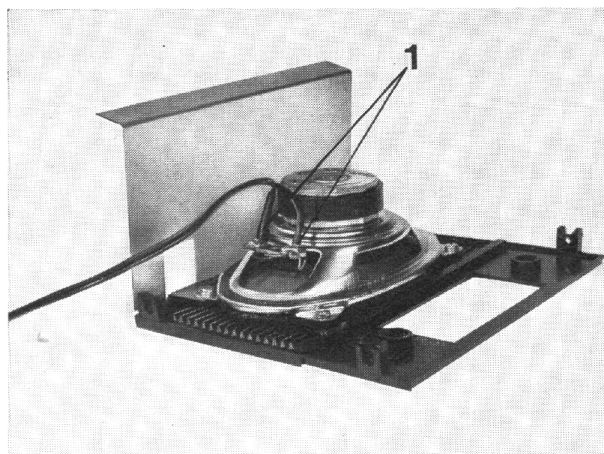


Fit the loudspeaker (2) and panel (3) to the radio using nuts (4 and 5).

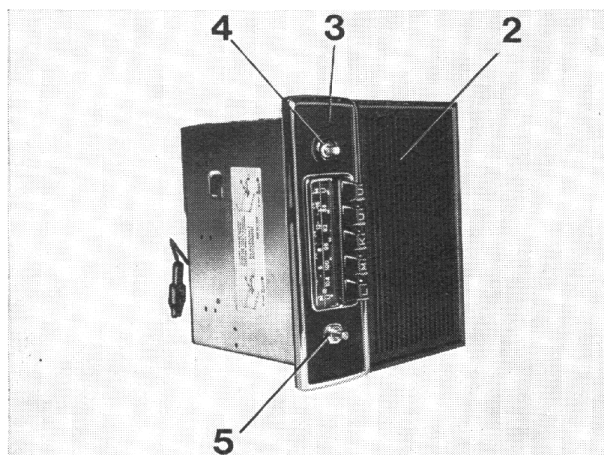


Connect the battery cable (6) and the loudspeaker cable (7) to the radio.

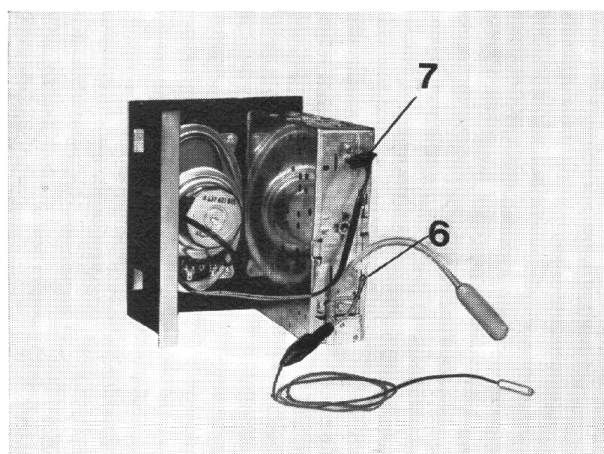


Attach the fixing bracket (8) to the radio using screw (9).

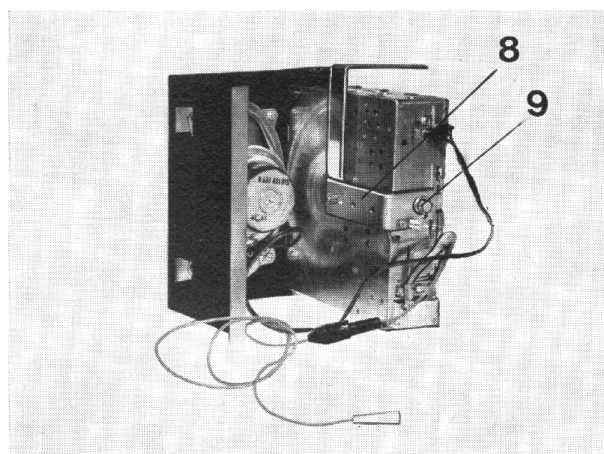


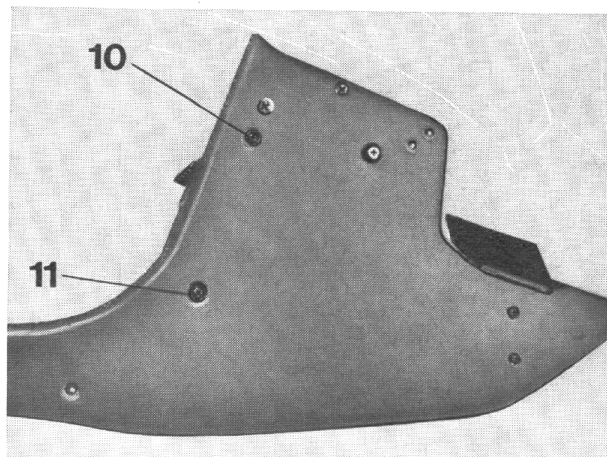


Locate the fixing holes (10 and 11) on the left and right side panels and pierce the fascia.

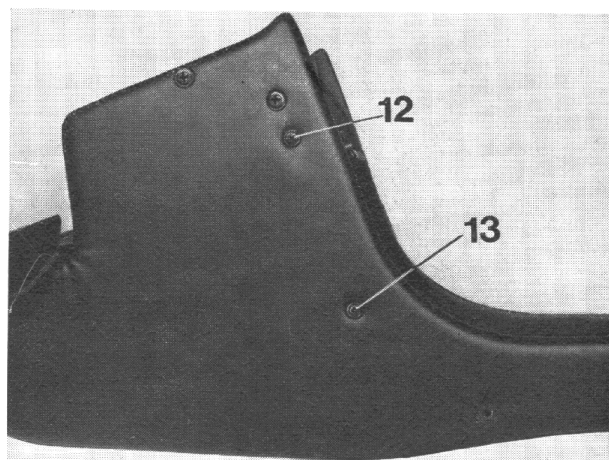

Detach and attach the padded trim for the lower steering column surround – 51 45 120.
Detach the lower center fascia trim.

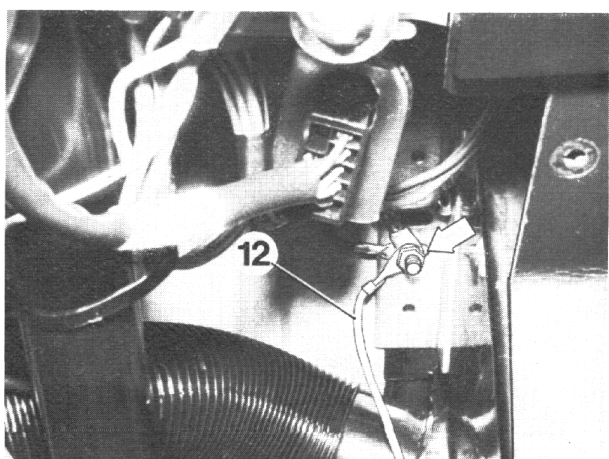

Attach the earth (ground) cable (12) to the heater fixing screw.

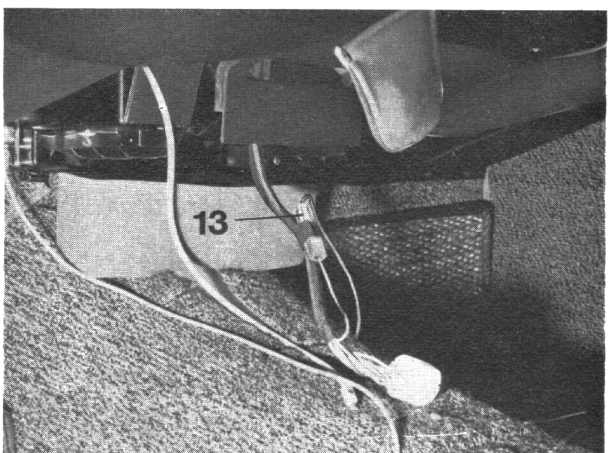

Connect the battery cable to the existing plug (13) on the wiring for the hazard warning flasher switch.




Connect all cables to the equipment.

16 = Antenna cable

17 = Battery cable

18 = Earth (ground) cable

Connect battery earth (ground) cable and check function with engine running at various speeds.

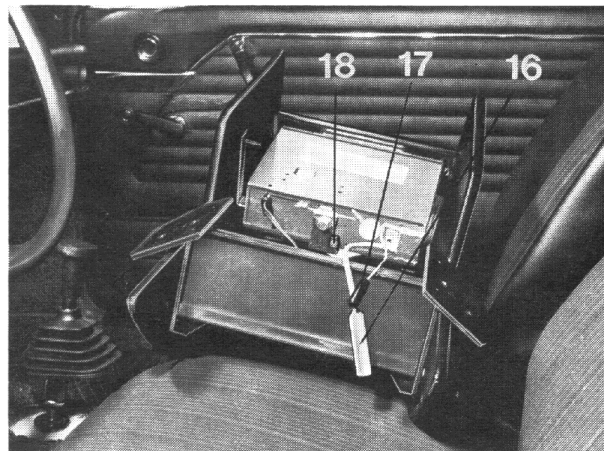

Note installed position (shown here) of the fully assembled radio.



Fit suppressor kit.

Suppressor condenser to ignition coil terminal 15.

Earth (ground) strap from ignition coil clip to engine block.




Remove distributor cap and exchange the existing plug for the suppressed plug.






Connect the suppressor condensor to the regulator.

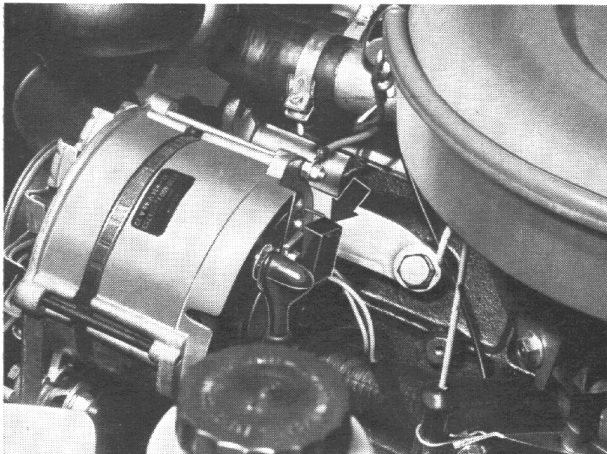


Connect the suppressor condensor to the alternator terminal B +.

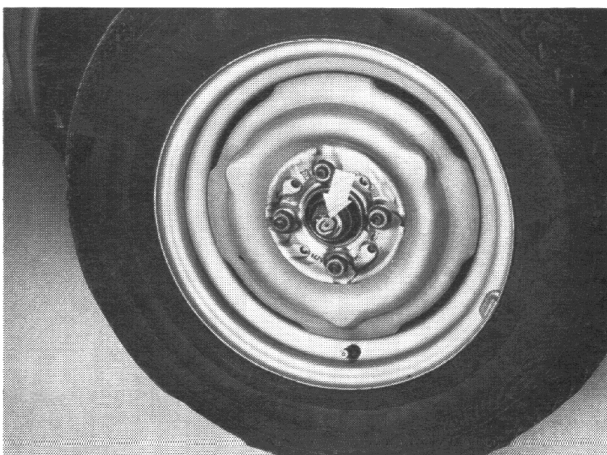

Remove wheel trims from front wheels and take off hub caps.

Fit wheel hub contacts.

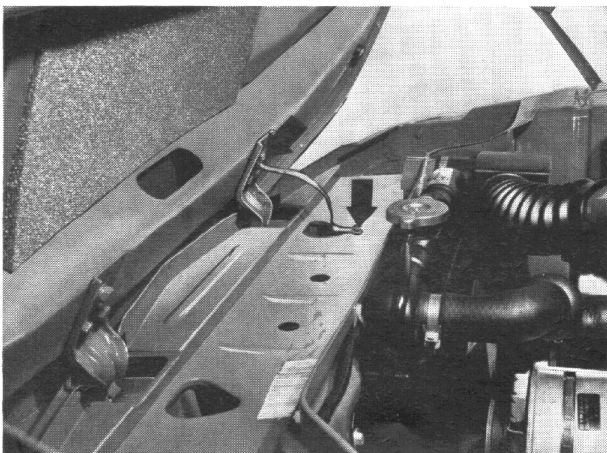

Connect earth (ground) cable from right hand hinge on the bonnet (hood) to the body.



65 21 000 Front antenna — installing


Cut out the template provided and lay on the left hand windshield pillar. Mark fixing holes.




Drill fixing holes for the base of the antenna.
Drill fixing holes for antenna supports and screw the supports in place.
Dimension A = 400 mm (15.75 in.).




Push antenna cable through the slot in the window member into the inside of the vehicle.
Secure the base of the antenna using self-tapping screws.

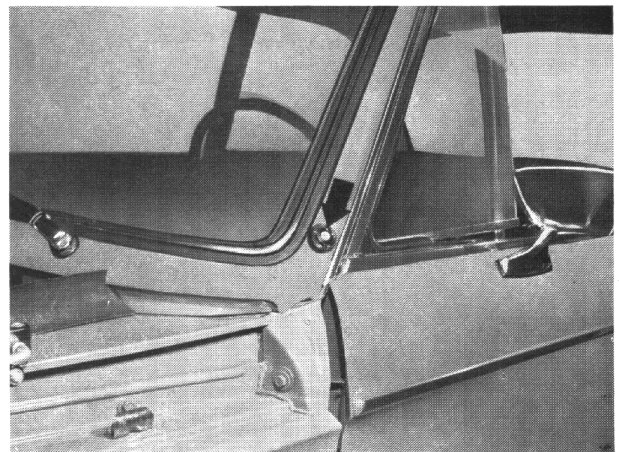

Undo screws (1 — 4) and remove the lower left hand facia trim.

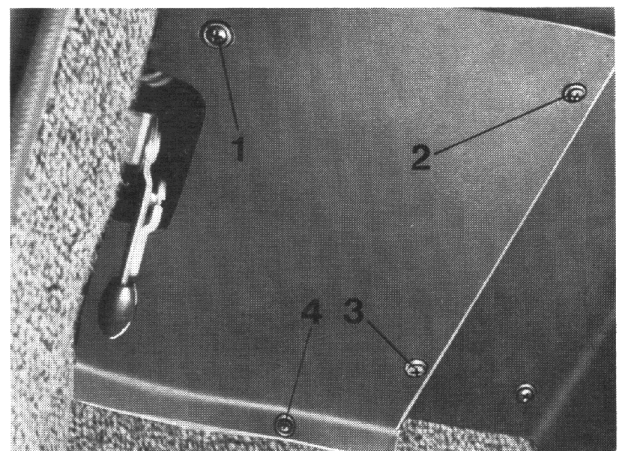

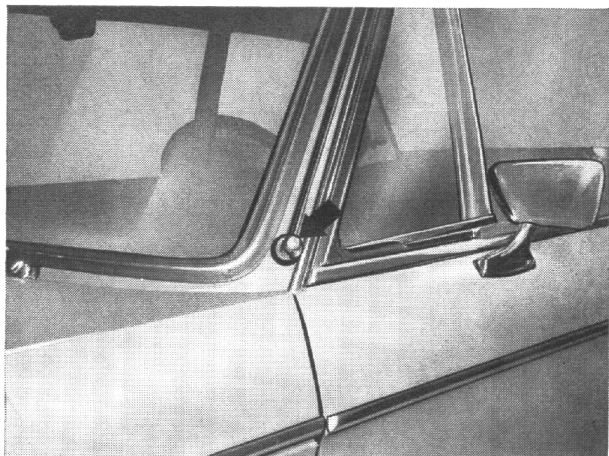

Slide the antenna through the antenna supports and screw on to the base.

When installing: Match the antenna to the receiver in accordance with the radio manufacturer's instructions.

