


34 41 000 Removal and fitting of handbrake lever

Take off rubber protection cap (1).

Disconnect handbrake cables (2).

Remove safety ring (3) and force out bolt (4), using BMW assembly tool 613.

Note when fitting: Adjustment of handbrake cf. 34 10 014.

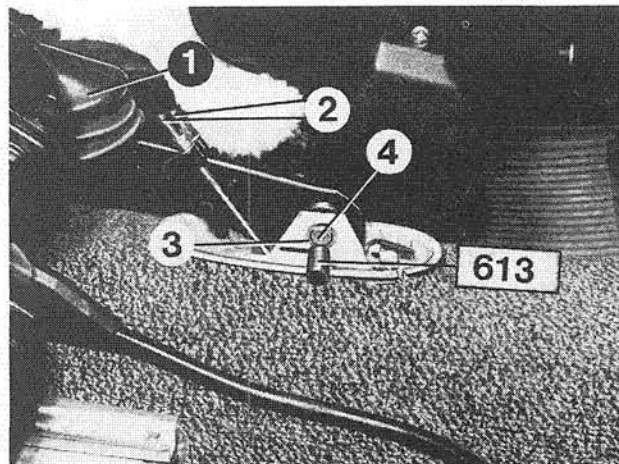


34 41 011 Replacement of locking teeth

Removal and fitting of handbrake lever cf. 34 41 000.

Check locking teeth and replace if necessary.

Important: Note correct position of locking teeth, locking and thrust rod when fitting.

Only fit new locking teeth element (A) (with finer teeth) if new locking catch (B) is also fitted.

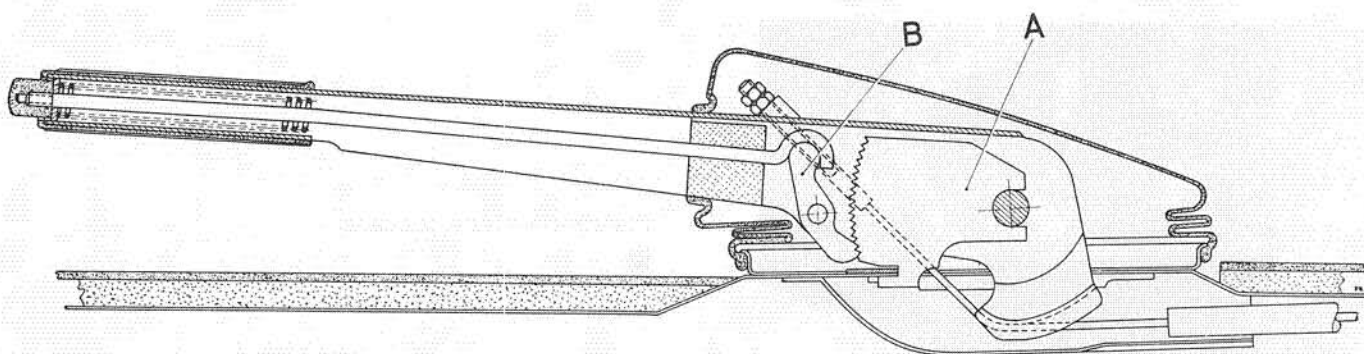


34 41 100 Removal and fitting of handbrake bowden cable

Take rubber protection cap off handbrake lever.

Unscrew locking nut (1) and nut (2) from handbrake cable (3).

Note when fitting: Note correct tightening torque¹⁾.

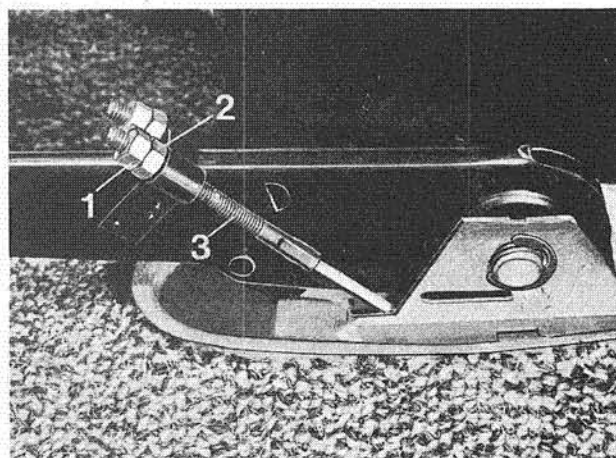

¹⁾ see Specifications