



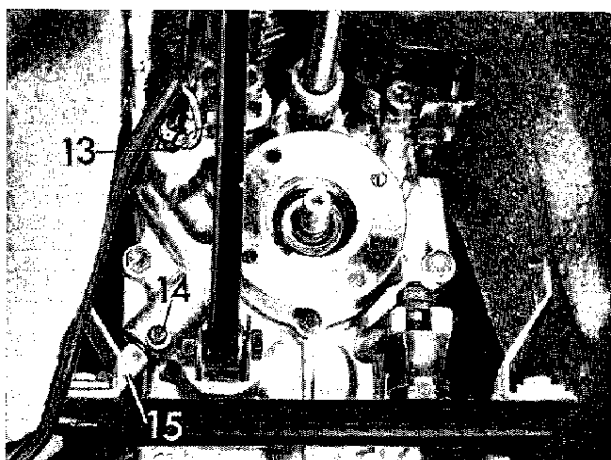


9. Pull off the two cables (13) for the reversing light switch.
10. Slacken the fixing bolt (14) for the speedometer shaft (15) (ring spanner 8 mm).

Fig. 5

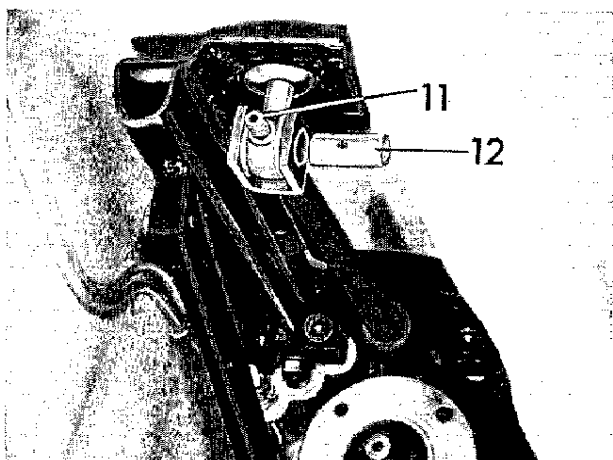

11. Slacken fixing bolt (11) for the kingpin (12) (Allen key 4 mm) and push out the kingpin (12).


Fig. 6

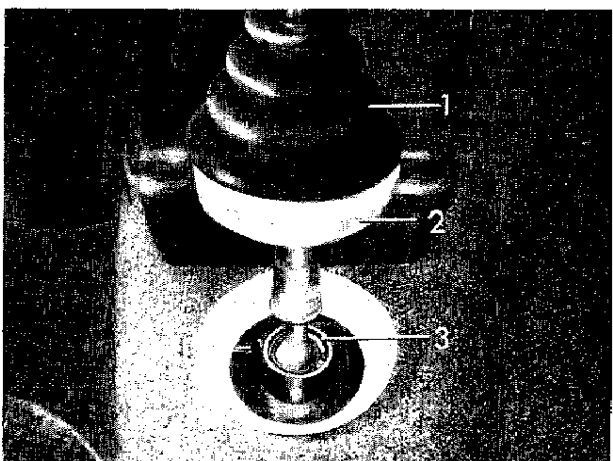

12. Push up gaiter (1) and foam packing (2).
13. Lift out the circlip (3) (circlip pliers) and extract gear change lever.

Installation note: Remove all play from ball sockets with shims (see page GU 4/1).

Fig. 7

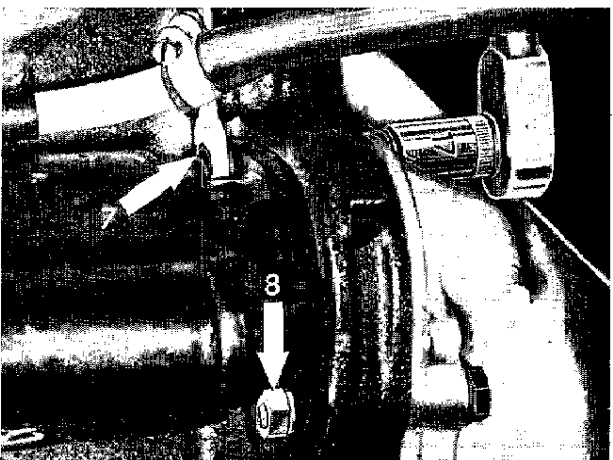

14. Slacken starter fixing bolts (7 and 8) (socket and open ended spanners 17 mm).

Installation note: Tighten up fixing bolts with torque wrench at 34 ft/lb. (4.7 m.kp) torque.

Fig. 8